

# IPC

## Summary Information

**Communication Driver Name:** IPC

**Implementation DLL:** T.ProtocolDriver.IPC.dll

**Interface:** TCP/IP

**PLC types supported:** Filmex and Varex extrusion

**Manufacturer:** IPC

**PC Hardware requirements:** Ethernet board

---

## Node Configuration

### Station Configuration

Station syntax: <IP Address>;<Port>

Where:

- **<IP Address>** = The IP address of the device
- **<Port>** = The IP port of the device. Default port is 1505

E.g.: 192.168.1.1; 1505

---

## Point Configuration

### Address

The syntax for the communication points is: DB<Number>;<Word>

Where:

- **DB** = Data Blocks
- **<Number>** = The group number of the configured Data Block
- **<Word>** = The address of the word

E.g.: DB10:5

---

## Troubleshoot

The status of the driver's execution can be observed through the diagnostic tools, which are:

- Trace window
- Property Watch
- Module Information

The above tools indicate if the operations have succeeded or have failed. A status of 0 (zero) means communication is successful. Negative values indicate internal driver errors, and positive values indicate protocol error codes.