DigitalGauge Control Reference

Present values as digital gauges.

Reference **Controls** **Gauge** DigitalGauge

A Digital Gauge displays data using the LED style appearance.

Requirements
Configuration
Runtime Execution

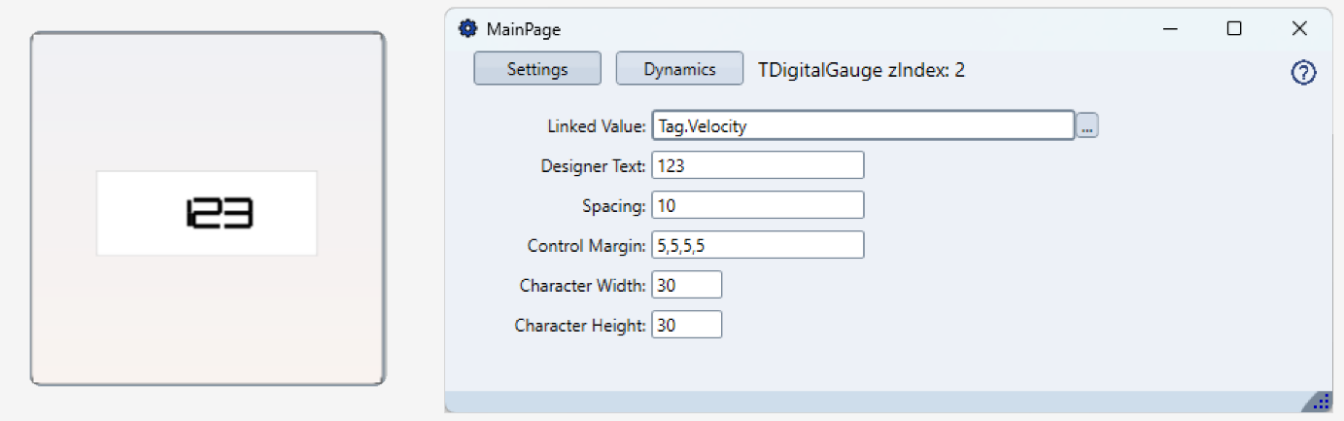

Requirements

This component is Portable. It runs both on Windows and on Web Pages hosted in any platform.

Configuration

1. Go to **Displays / Draw**.
2. On the Components Panel, select **Gauges**, then **DigitalGauge**.
3. Click or drag-and-drop it on the Drawing area to use it.
4. Double-click the object to open the configuration window.

DigitalGauge Settings	
Field	**Description**
Linked Value	Links a specific data value or source to the gauge.
Designer Text	Defines the text shown in Drawing mode.
Spacing	Specifies the spacing between the characters.
Border Margin	Sets the Border Margin for the text included on it. Influences the visual clarity and display of the gauge.
Character Width	Changes the Character Width.
Character Height	Changes the Character Height.
Foreground	Defines the Text Color.

Runtime Execution

During runtime, the DigitalGauge operates as a dynamic interface for displaying data, while being constantly updated. Users can customize the gauge by setting its orientation, position, and the data it is linked to. The control allows for detailed adjustments including the Border Margin, Text Color, Character Sizes and even changing the Spacing between characters.



In this section...
